




Sonic Farm Pro Audio,
Vancouver, BC, Canada
Tel 310-402-2390, 778-863-1613
www.sonicfarm.com
info@sonicfarm.com

Sonic Farm Je-DI

Pentode Direct Injection Box

USER MANUAL

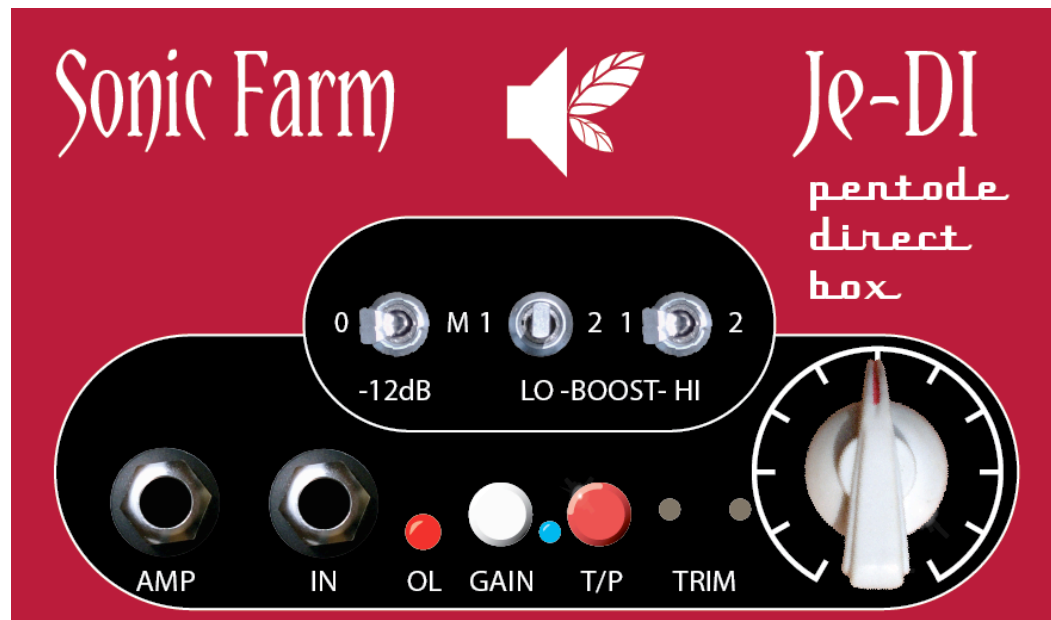

Dear Audio Professional,

Thank you for purchasing the Je-DI. We hope it will deliver exceptional performance for many years into the future.

Please take the time to read this manual. It describes Je-DI's design philosophy as well as its most important functions.

DESIGN PHILOSOPHY

Our initial idea was to create the best sounding and the most flexible DI-box on the market. There are enough "better mouse traps" out there. It had to excel in all its applications: plugging into a microphone balanced input, an instrument amplifier and a balanced line level input, all at the same time.

Instrument players, especially bassists, like a colored sound. Something that is transparent yet warm, colored but not fuzzy or dirty and fat without losing definition. Only a carefully designed tube circuit can deliver that. In fact, Je-DI is a HYBRID design DI-box. It uses both tubes and solid-state components in its signal path.

The input goes directly to the tube, where it sees input impedance similar to that of a tube guitar or bass amp (2.2M).

An EF86 pentode operating in class A is Je-DI's only active gain stage. It works in either triode or pentode mode. Bypassing cathode increases the gain. Frequency dependent bypass using inductors and capacitors yields a subtle, but very musical tone control.

This circuit exhibits a certain non-linearity (coloration); the harmonic distortion may exceed 1% before the actual clipping occurs.

To preserve it, we purposely kept the circuit simple. The tube stage is followed by a solid-state buffer and the output level control. Finally, a pair of high performance OP-amps with extremely low distortion is used to drive the mic-level output transformer and the desired balanced line level unit (like a recording interface, compressor, etc.).

SOME REMINDERS REGARDING TUBES

Tubes work with very high supply voltages. There are points inside the Je-DI that measure in excess of 350V DC. If touched, those voltages could be lethal!

Make sure that no pointed objects (especially metal) or liquids penetrate the inside of the unit through its cooling grilles or otherwise. If that accidentally occurs, immediately pull the plug out of the power socket and wait for the unit to discharge. Je-DI must not be operated if moisture penetrates inside.

Before opening the unit (to change tube, wipe off moisture, etc) one must disconnect the mains cord and then wait several minutes for the internal capacitors to discharge.

To ensure proper cooling, please leave Je-DI's cooling grille uncovered.

Please do not replace the mains fuse with one of a higher value: use only 300mA@115V A (or 150mA@220-240V)

Legal Disclaimer: Neither Sonic Farm nor anybody associated with it can take any liability for damage to persons or property caused by either use, modification or servicing this unit.

HOW TO CHANGE TUBES

This only applies to a functional unit. Please entrust any repairs to qualified service personnel.


Only an EF-86 (or equivalent, like 6267, 6CF8 or Russian 6J32P) pentode can be used.

Pull out the power cord. Wait for at least 10 minutes for all the capacitors to discharge.

Remove Je-DI's cover by loosening all top and side screws.

While holding the chassis tight with one of your hands, pull out the tube with another hand. Small, but fast left-right motion may be needed to loosen the tube from a tight socket. Do not bend the tube much out of the axis because you can break the pins or cause air to enter the tube and destroy it. Paying attention to the pin alignment, push the replacement tube into the socket using same motions but in the opposite direction. Make sure it goes in all the way. Due to electric shock danger, testing the unit with the lid removed is not recommended. Screw the cover back in place and you're done.

Je-DI'S FRONT PANEL CONTROLS:

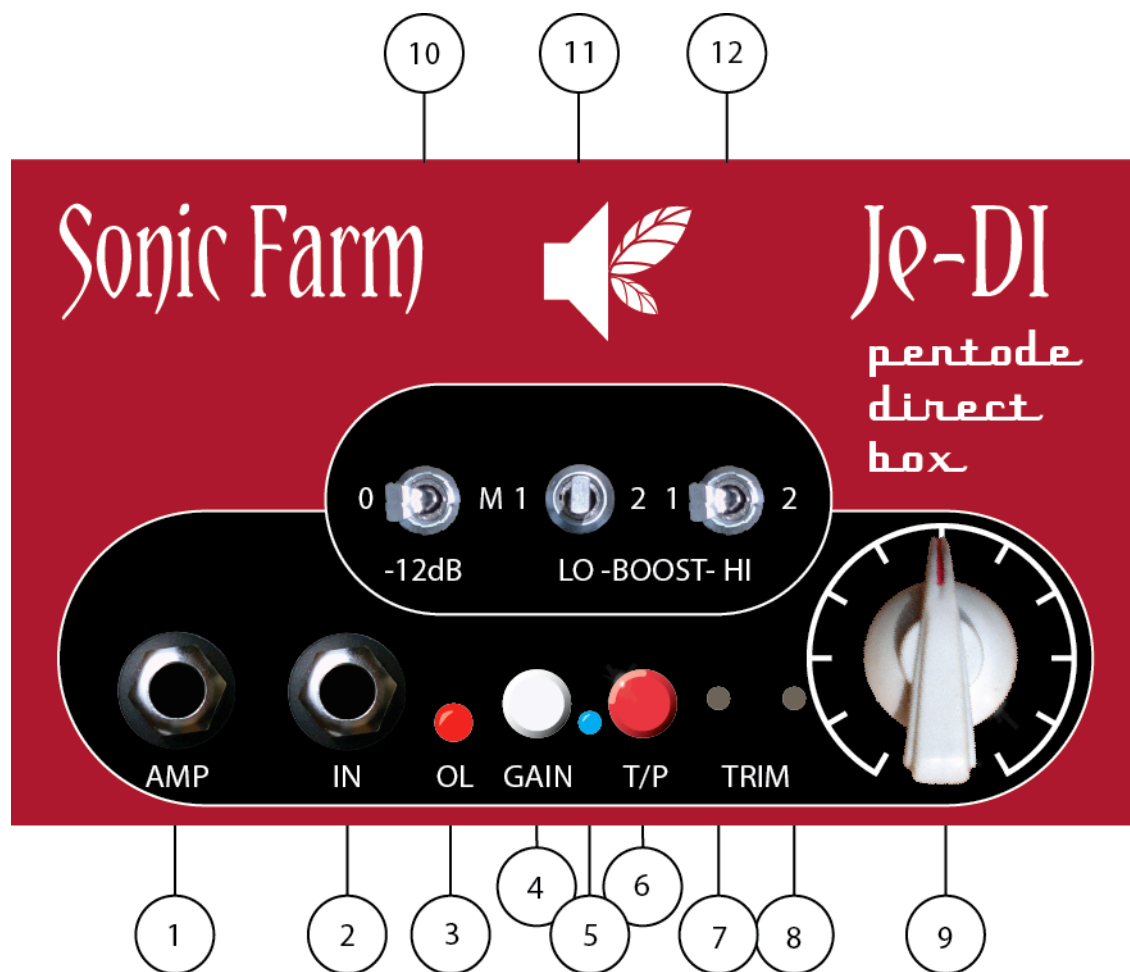

- 1** 1/4 inch unbalanced amp output. This is a buffered (low output impedance) output, suitable for handling long chords without any problems. Do not plug in an instrument here.
- 2** 1/4 inch unbalanced instrument input. Good for guitar, bass or keyboards. The impedance is 2.2M Ω .
- 3** Bi-color LED. Green indicates signal presence. Red indicates clipping distortion. To eliminate it, disengage the "gain up" or take the tube into the "triode" mode (switch out).

4 Gain boost, gives just under 5dB boost in triode and about 9dB in pentode mode.

5 Tube heater voltage indicator, should come on with the power switch.

6 Triode/Pentode mode switch. Pentode mode has more gain (33 versus 24dB) and somewhat different tone character. Pressing this switch changes the biasing of the tube and therefore causes a loud “pop”. To eliminate it, please mute outputs by flipping the switch #10 to the right.

7 and 8 The low and high frequency boost level can be adjusted by these 2 trim-pots.

Use a mini slot (.098”/2.5mm Ø, .031”/0.8mm wide) or hex (.104”/2.64mm hex x .055”/1.4mm deep) screwdriver to adjust them.

The default settings are maximum: 4.5dB in triode, 9dB in pentode mode. 6dB/octave. Low boost uses a real inductor for a fat tone.


9 Output level. Does not affect tube gain or overload level, just determines how hard the output buffer, transformer, and ultimately the load are driven. The Je-DI may drive your next unit (Compressor, EQ, Converter, Mixer) into clipping even though the red light doesn’t indicate any distortion. In that case, reduce the output level. Its always better to start with lower output level and then increase it as much as your audio chain allows, as distortion can occur at more than one point.

10 Attenuation/Mute switch. 12dB attenuation in mid position, muted in right.

11 and 12 Low and high frequency shelving boost starting at 300 or 500Hz, and 2kHz or 4kHz respectively. Mid position is flat. “Gain up” switch will bypass this filter. This is a subtle tone control meant for a gentle boost, adding depth or presence to the signal.

It does not use a separate stage; rather, it utilizes the tube gain stage (only one in the signal chain).

Je-DI'S REAR PANEL CONTROLS:

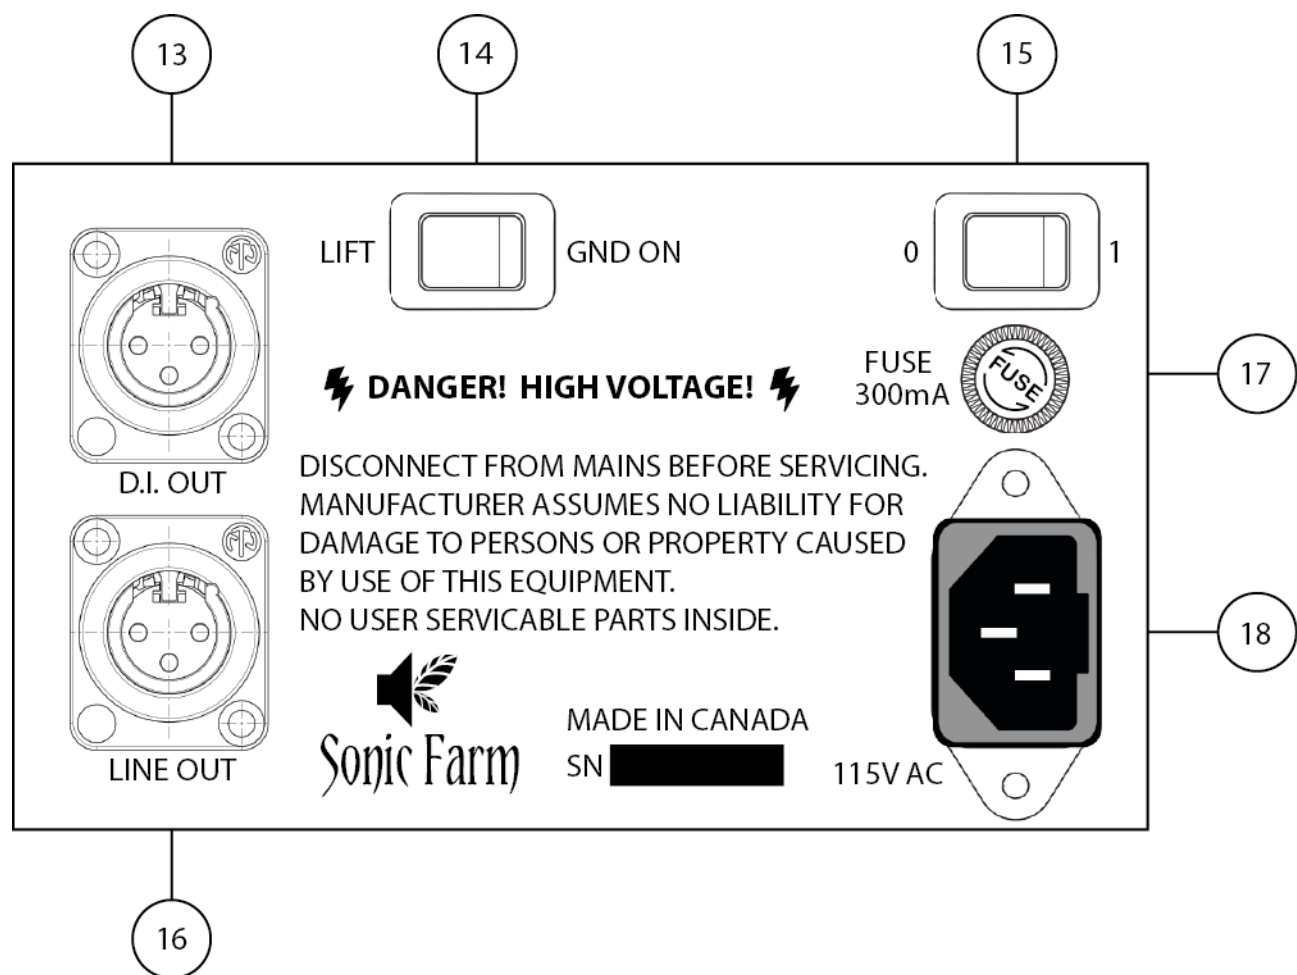

A

- 13** DI (or microphone level) output. (Transformer balanced) Balanced connection only! (XLR pin connection: 1=GND, 2=HOT, 3=COLD).
- 14** Ground lift switch. It should normally be kept in “Gnd On” position. However if you encounter hum when the unit is patched into your system, switch it over to “Gnd Lift”. This will remove hum due to ground loops only; it will not help eliminate hum that comes in with the signal! (Like for instance hum coming from a single coil guitar pickup) Do not disconnect the ground wire on your 3-prong mains plug!
- 15** Power Switch
- 16** Line level balanced output (electronically balanced). (XLR pin connection: 1=GND, 2=HOT, 3=COLD)

17 Mains fuse. Please replace it only with the one of value indicated. (300mA@115VAC, 150mA@220-240VAC)

18 AC power inlet. Always operate the unit on the mains voltage it was designed for (115VAC or 220-240VAC). We purposely omitted the mains voltage selector as a wrong voltage setting can cause a lot of damage to the unit. Creamer's power transformer can be rewired for a different operating voltage but that is something only a qualified service technician would do.

TECHNICAL SPECIFICATIONS:

1 channels

Frequency response: 10Hz-50kHz +/- 3dB

Maximum gain: 54dB at the line output, 32dB at the DI (mic level) output

Harmonic distortion: <2% before clipping level, quickly decreases if driven less.

Maximum output level: 22dBu

Minimum output load: 600Ω

Connectors: XLR DI and line output, balanced only

Instrument input: 1/4" unbalanced, mono

Amp: 1/4" unbalanced, mono, buffered

Power consumption: 15W

WARRANTY INFORMATION

Sonic Farm gives a one year warranty on parts and labor from the date of purchase.

Should you need to send in your unit for warranty covered service, please contact us for an RMA number first.

We will also tell you where to send the unit.

Any Modification of the unit voids the warranty.

CONTACT INFORMATION:



Sonic Farm Pro Audio,
Vancouver, BC, Canada
Tel 310-402-2390, 778-863-1613
www.sonicfarm.com
info@sonicfarm.com